

BB386BSA / BB392BSA

BB Installation Instructions



IMPORTANT NOTICE:

- Do not alter this product in any way as it can cause unseen damage. Any modifications to this product will void the warranty.
- TOKEN suggests taking your bottom bracket to your local authorized TOKEN dealer for installation, service and adjustments.
- Read the user's guide before installation and use. Follow all instructions carefully. If you have any questions, don't ride the bike. Take it to your local TOKEN dealer for assistance.

BEFORE RIDING:


- Check that there is no side-to-side movement in the bottom bracket. Also check that the cranks spin smoothly. If there is movement or the bottom bracket is not smooth, take the bicycle to your local TOKEN dealer for service or replacement.
- Ensure that the cranks are firmly attached to the bottom bracket. Improperly attached cranks can become detached from the bicycle and serious injury can result. Never ride a bicycle with improperly attached cranks.

AFTER RIDING:

- When cleaning the bottom bracket, only use mild soap and water. Never spray the bottom bracket with high-pressure water. Water can enter the bottom bracket and cause it to wear prematurely.

WARRANTY:

All TOKEN products are guaranteed against defects in materials or workmanship for two (2) years from the original date of purchase. This warranty applies to the original owner only and is not transferable. The warranty is considered void if resold. The warranty does not cover normal wear and tear or damage from abuse. Please see our website or contact your local dealer or distributor for more details.

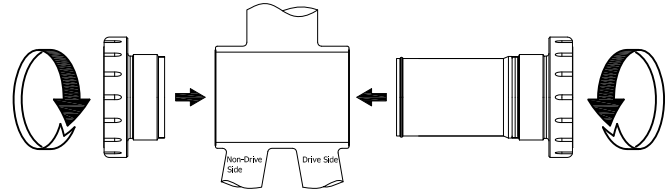

Step 1

Install any necessary spacer or adaptor, according to chart.

Step 2

Thread the cups into the frame using BB tool, ensuring they are tightened according to the direction arrows on the bottom bracket.

Step 3


Use a torque wrench to tighten to 35-50 N.m (310-443 in-lb)

www.tokenproducts.com

EASTON EC90SL ROAD CRANKSET (with EC129 spindle)

MODEL: BB386BSA / BB392BSA


No.	Description	Q'ty
1	Right Cup	1
2	Left Cup	1
3	Center Sleeve	1
5	0.6mm Spacer	2
6	2mm Spacer	2

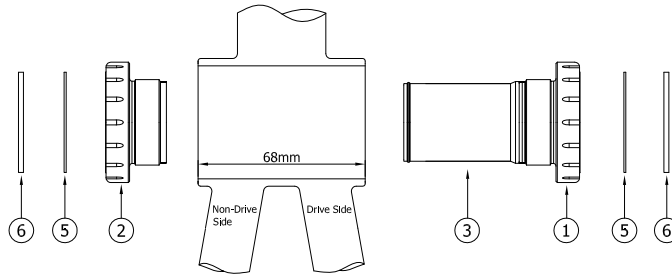

ROTOR 3D+ ROAD CRANKSET

MODEL: BB386BSA / BB392BSA


No.	Description	Q'ty
1	Right Cup	1
2	Left Cup	1
3	Center Sleeve	1
5	0.6mm Spacer	1
6	2mm Spacer	1

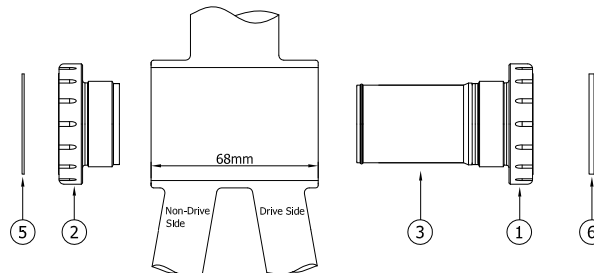

OTHER BB386 ROAD CRANKSETS

MODEL: BB386BSA / BB392BSA

No.	Description	Q'ty
1	Right Cup	1
2	Left Cup	1
3	Center Sleeve	1
4	Wave Washer	1

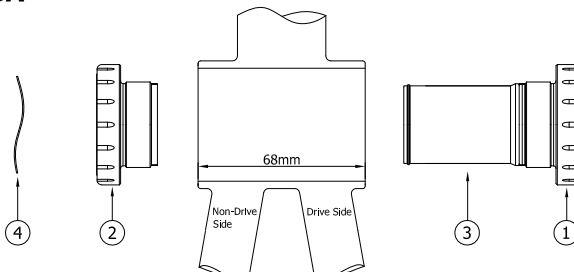


BSA-68mm FRAME (1.37" x 24T)

FSA BB392EVO MTB CRANKSET

MODEL: BB392BSA


No.	Description	Q'ty
1	Right Cup	1
2	Left Cup	1
3	Center Sleeve	1
4	Wave Washer	1
5	0.6mm Spacer	1
6	2mm Spacer	1

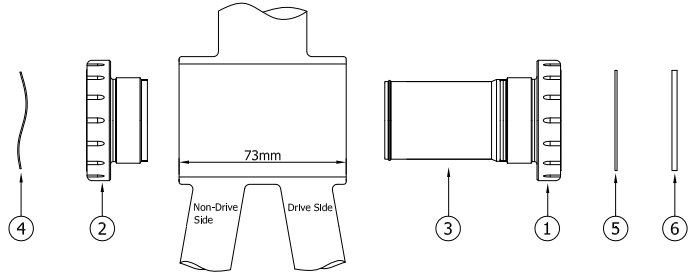

RACEFACE Cinch-134 MTB CRANKSET

MODEL: BB392BSA

No.	Description	Q'ty
1	Right Cup	1
2	Left Cup	1
3	Center Sleeve	1
5	0.6mm Spacer	2
6	2mm Spacer	2

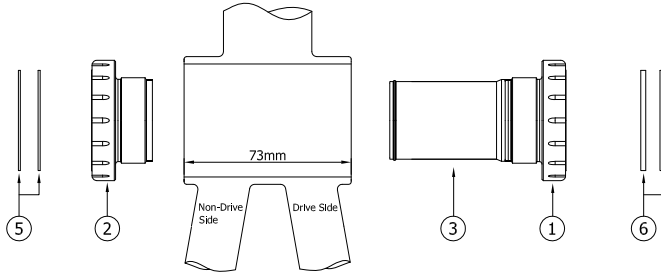

BSA-73mm FRAME (1.37" x 24T)